




Warning!
Flat glass units are heavy.
Large units may require a mechanical lift

For Mardome Glass Trade
on to 150mm or 300mm Kerb
See **Page 2** overleaf


Contents

i Please unpack and check that all correct parts are included and undamaged.


All Mardome Glass Trade

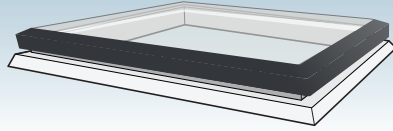

 With either assembly, you will receive:
Kerb Fixings



Manual Opening Unit Extras

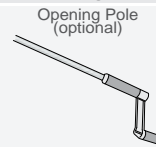

Fixing Quantities


Length of Nominal rooflight Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500, 1650	4
1800, 1950	5
2100, 2250	6
2400	7

(All fixings supplied in packs of 5.)

Mardome Opening Unit - Pre-Installation Information

! Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

Manual Opening rooflight on existing upstand

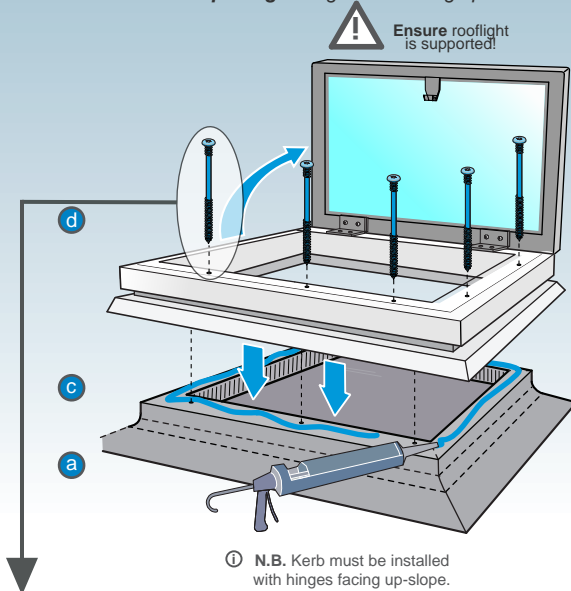

i N.B. Kerb must be installed with hinges facing up-slope.

Installation Instructions

! Ensure rooflight is supported in open position to avoid damage!

a Install roof covering to cover existing upstand in accordance with manufacturer's installation recommendations.

i N.B. It is important that there should be no excessive build up of layers, the top surface should be level and free from any protrusions or projections which may prevent adequate weather proofing.

b Carefully remove roof light from its packaging and ensure that hinged rooflight is unlocked from frame and can be opened to 90°. If not disconnect, as shown.


c Mastic/Silicone around the edge of the upstand opening and correctly place kerb, ensuring it is located squarely to the upstand with hinges facing up-slope.

d Fix kerb to the builders upstand using the 125mm kerb fastener.

e Ensure that the hinged rooflight is connected to the frame and locked into the closed position

Kerb Fixing


d All Mardome Glass Trade

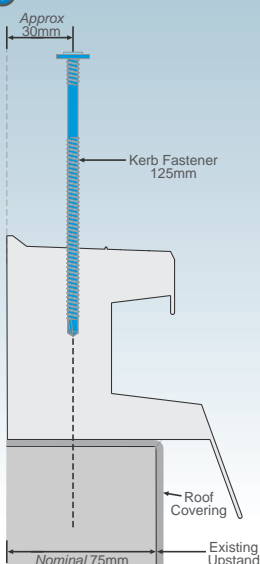

Mardome Installation

! Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

b e Rooflight connection to frame

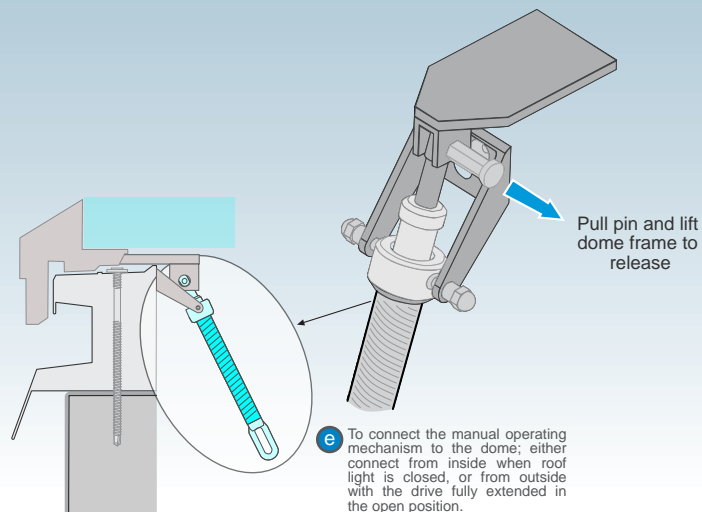

e To connect the manual operating mechanism to the dome; either connect from inside when roof light is closed, or from outside with the drive fully extended in the open position.

i TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.




Warning!
Flat glass units are heavy.
Large units may require a mechanical lift

For Mardome Glass Trade on to Existing Upstand See Page 1 overleaf


Contents

i Please unpack and check that all correct parts are included and undamaged.


All Mardome Glass Trade

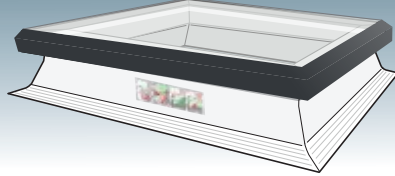

 With either assembly, you will receive:
Kerb Fixings



Manual Opening Unit Extras

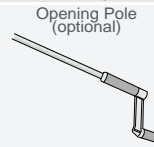

Fixing Quantities

Length of Nominal rooflight Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500, 1650	4
1800, 1950	5
2100, 2250	6
2400	7

(All fixings supplied in packs of 5.)


Mardome Installation

! Please note that all Health and Safety Regulations must be followed on site throughout the installation process.


Installation Instructions

Manual Opening rooflight on to 150mm or 300mm kerb

i N.B. Kerb must be installed with hinges facing up-slope.

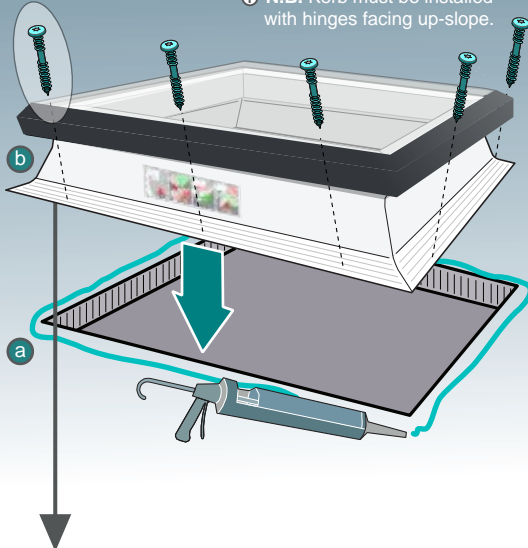


c **Roof Covering Installation**

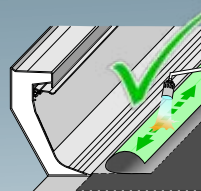

If required, lightly torch roof covering.




WARNING:
Never apply direct heat or naked flame to the roof light!

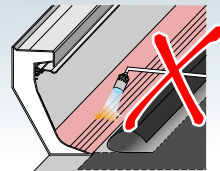

d **IMPORTANT:**
Roof Covering Clamp Locking



Push along line as shown to lock. **DO NOT** push on soft area!

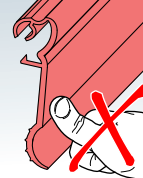

a Mastic/Silicone around the edge of the roof opening and correctly position kerb, ensuring it is located squarely over the roof opening with hinges facing up-slope.

b Fix kerb to the roof using the 55mm kerb fastener.

See above **Fixing Quantities** table for the correct quantity of fasteners required for the size of the rooflight.

i N.B. Length of side refers to the nominal rooflight size (equivalent to inside base of kerb foot).

c Install roof covering up to lip, to stop under roof covering clamp, ensuring it **does not** foul clamp. Install in accordance with manufacturer's installation recommendations



d Lock the roof covering clamp down fully, as shown.

e See e (below) for further information on opening mechanism

Kerb Fixing


c d All Mardome Glass Trade

- Kerb
- Roof Covering
- Structural Member
- Insulation

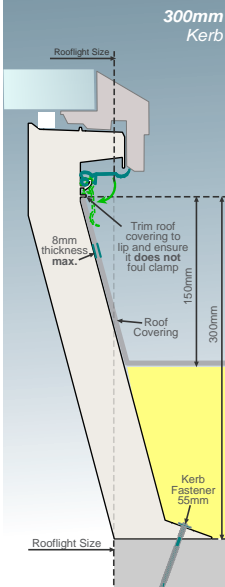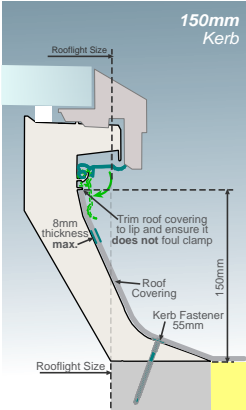

Mardome Opening Unit - Further Information

e For Manual Linear Drive Connection

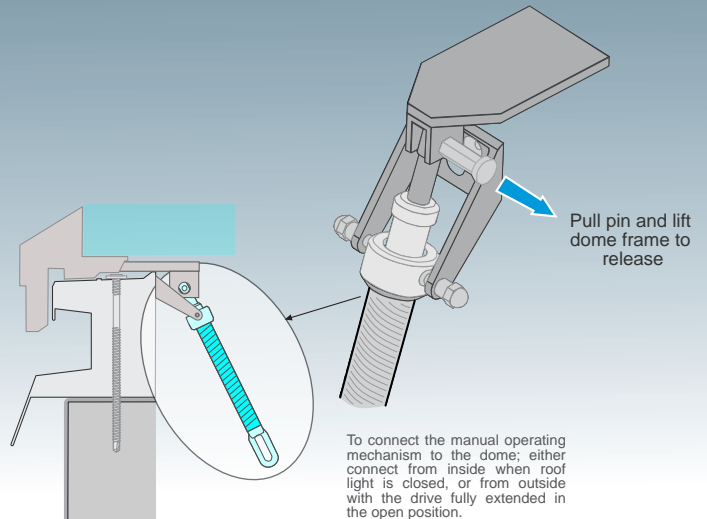

i **TECHNICAL SUPPORT:** For any technical information/queries please contact your supplier.