



PERFORATED Fitting Instructions

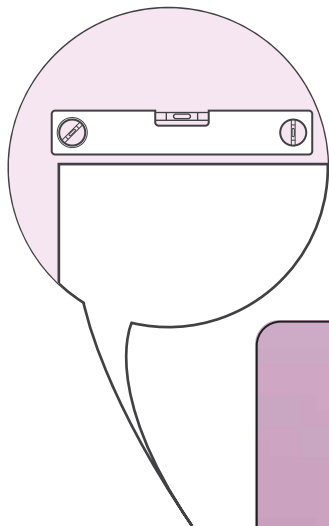


Form a suitable aperture 10mm larger than the ordered panel size. Form level, plumb, and square.

1

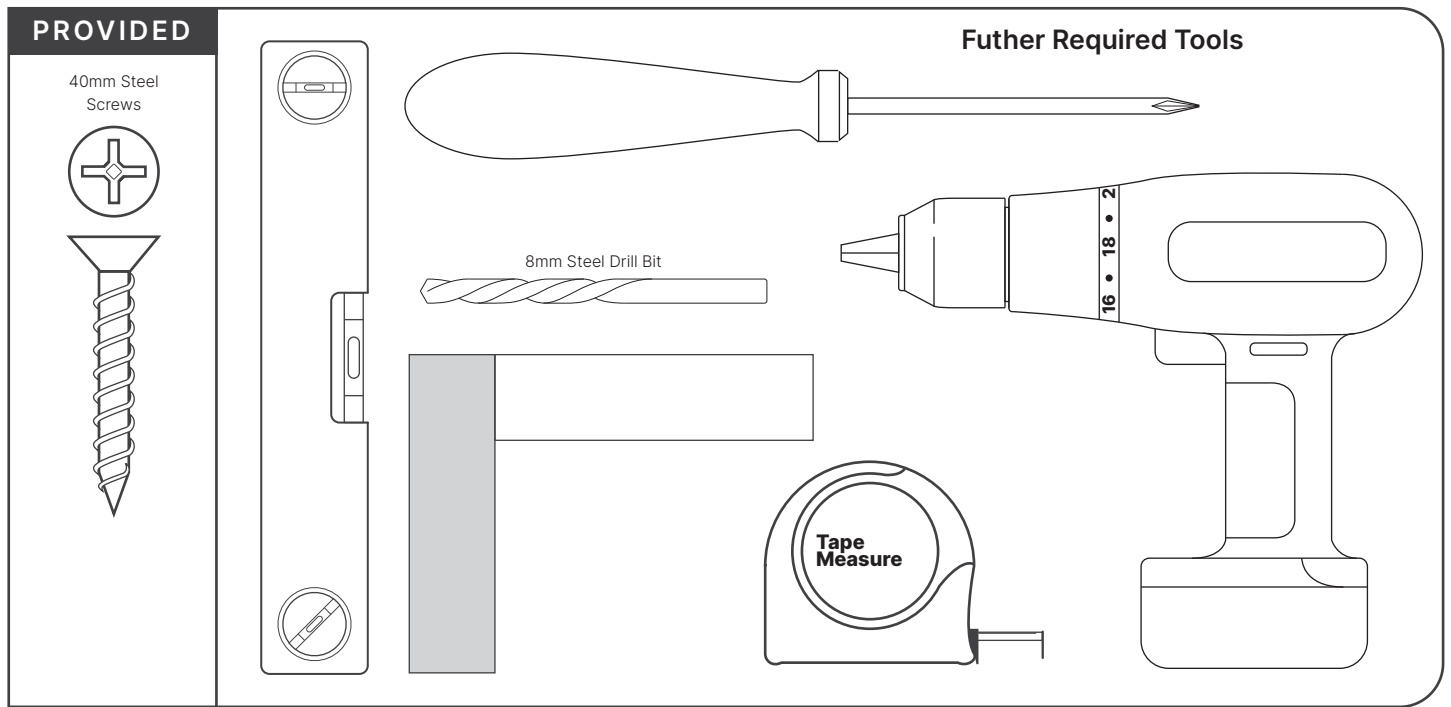


2

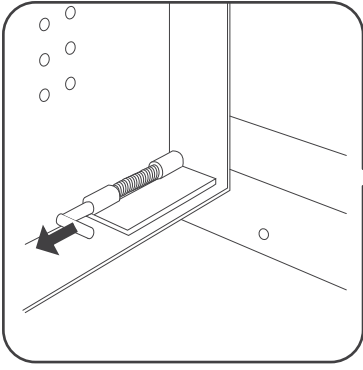

When installing larger access panels, it is recommended to remove the door from the frame before fitting. Pulling the spring catch inwards will release the door from the frame.

3

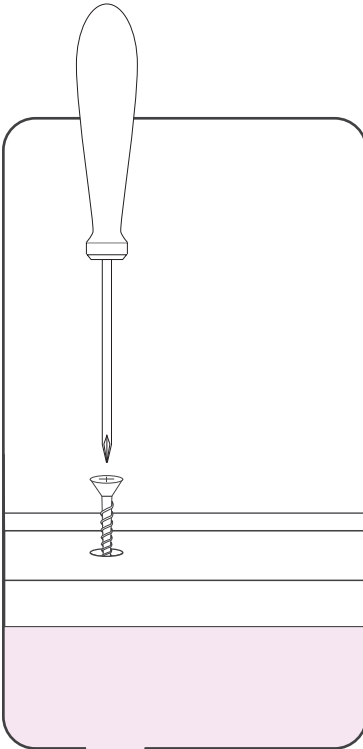


Insert the frame into the opening.

Fix the frame using 40mm steel drywall screws using all the pre-punched holes on all four sides of the frame (do not fully tighten).


Ensure there is an equal gap around all sides of the frame, using packers where required.

Fully tighten the screws, ensuring the frame remains square and all the fixings are substantial.

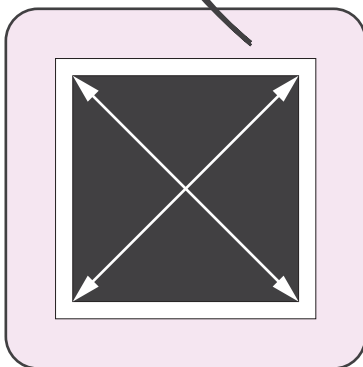

4

Depending on the wall's construction, you may be required to re-pilot drill the holes where the hinge pins locate into the frame.

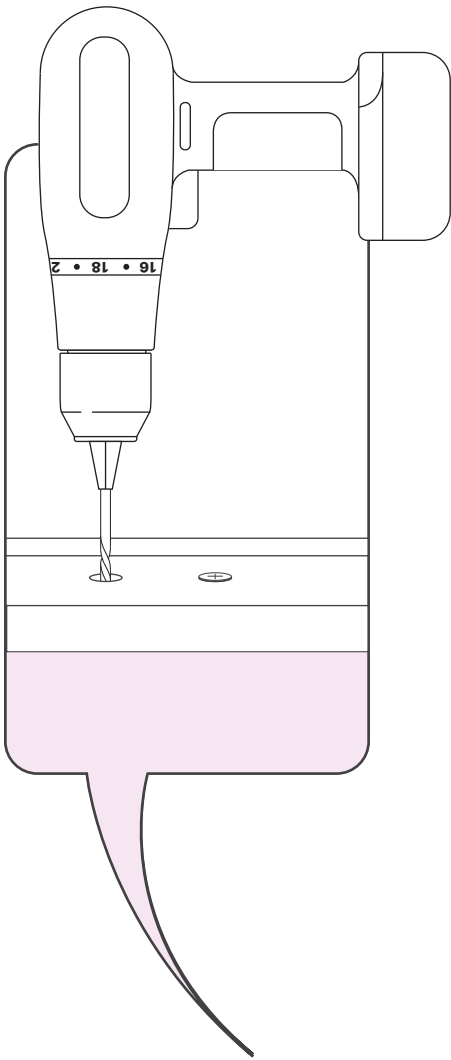**5**

Reinstall the door. Repeating the process in section 2 if the door was removed.

