
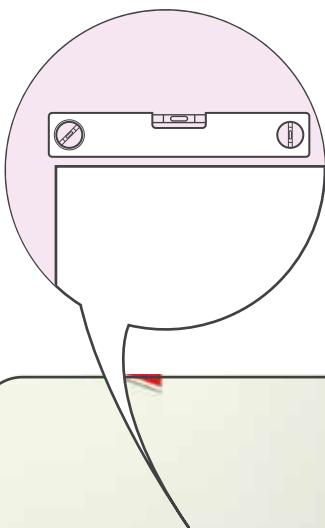
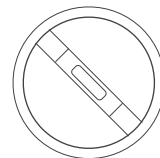

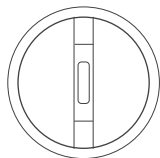



Ray-Guard Fitting Instructions

40mm Steel
Drywall
Screws




Ensure your structural opening is formed level, plumb, and square and 5mm larger than the internal frame size.

Support the opening by adding a timber batton around the opening if required.

1




2

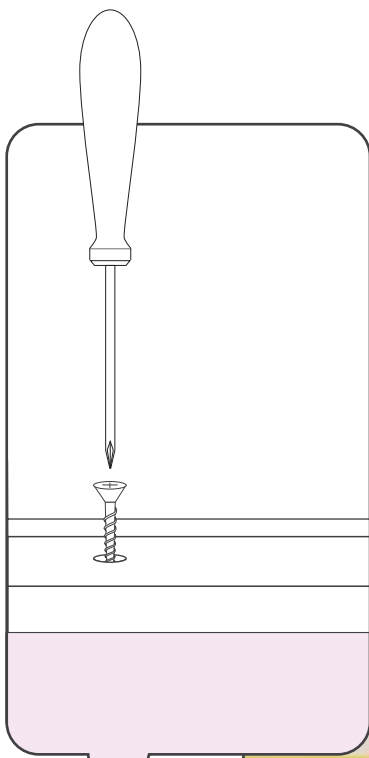

Fix the frame using 40mm steel drywall screws using all the pre-punched holes of the frame.



3

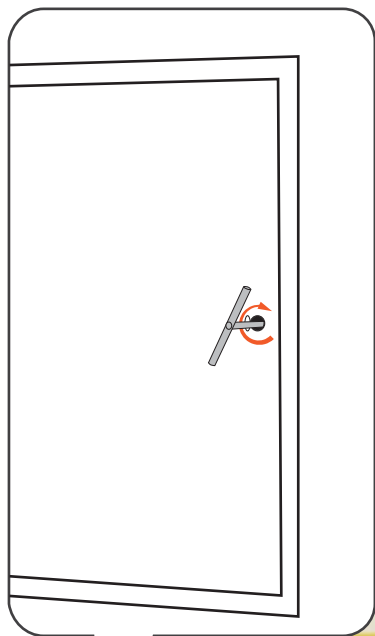

Close the door and secure the lock by turning the provided T-key clockwise.

