



Required Tools




1

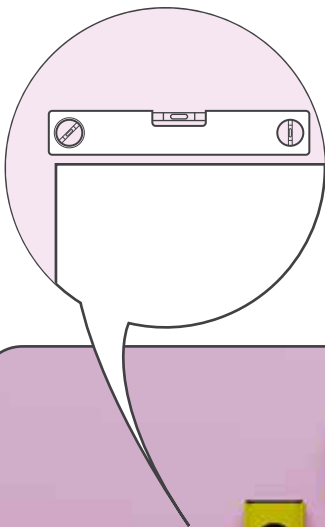

Ensure your structural opening is formed level, plumb, and square and 5mm larger than the internal frame size.



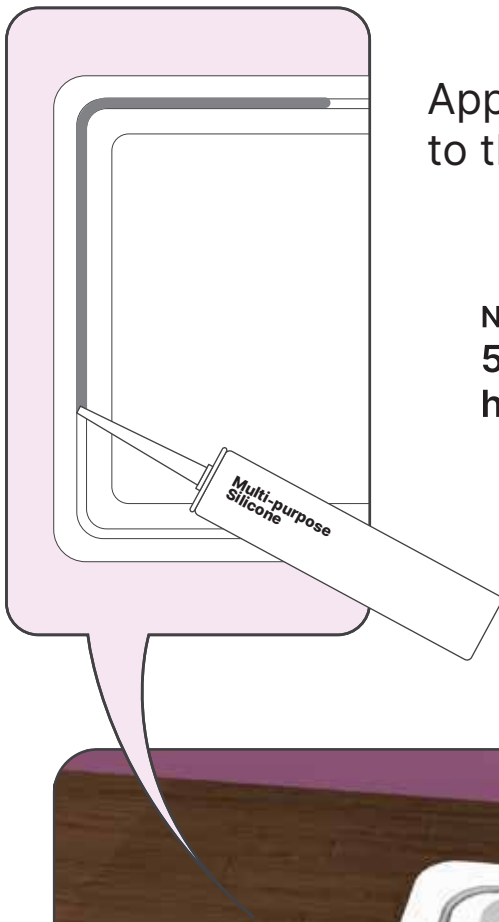


Apply a suitable silicone adhesive bead to the groove in the back of the frame.



NOTE:

550×550mm panels have preformed screw holes and must be screw fixed in place



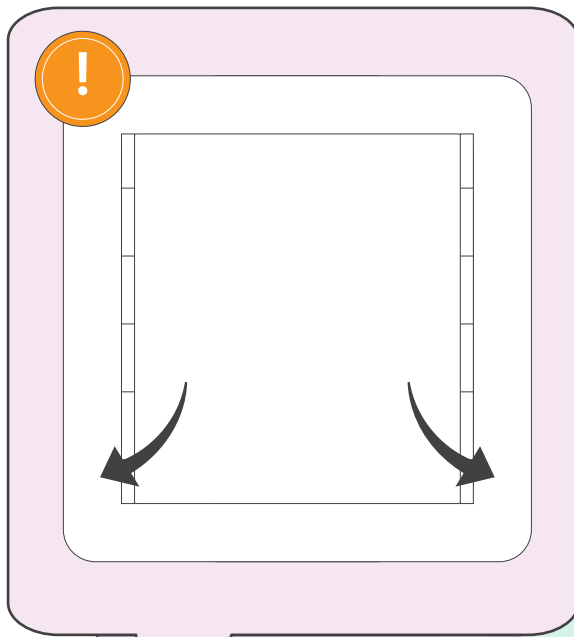

Ensuring the hinge is on the correct side, push the access panel into place.

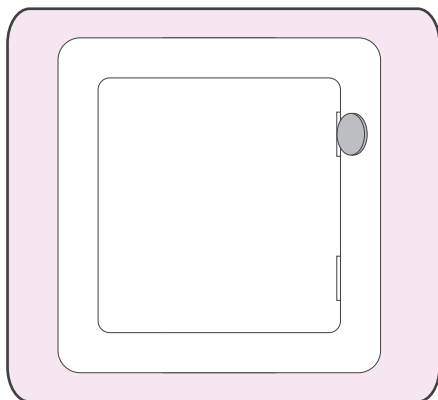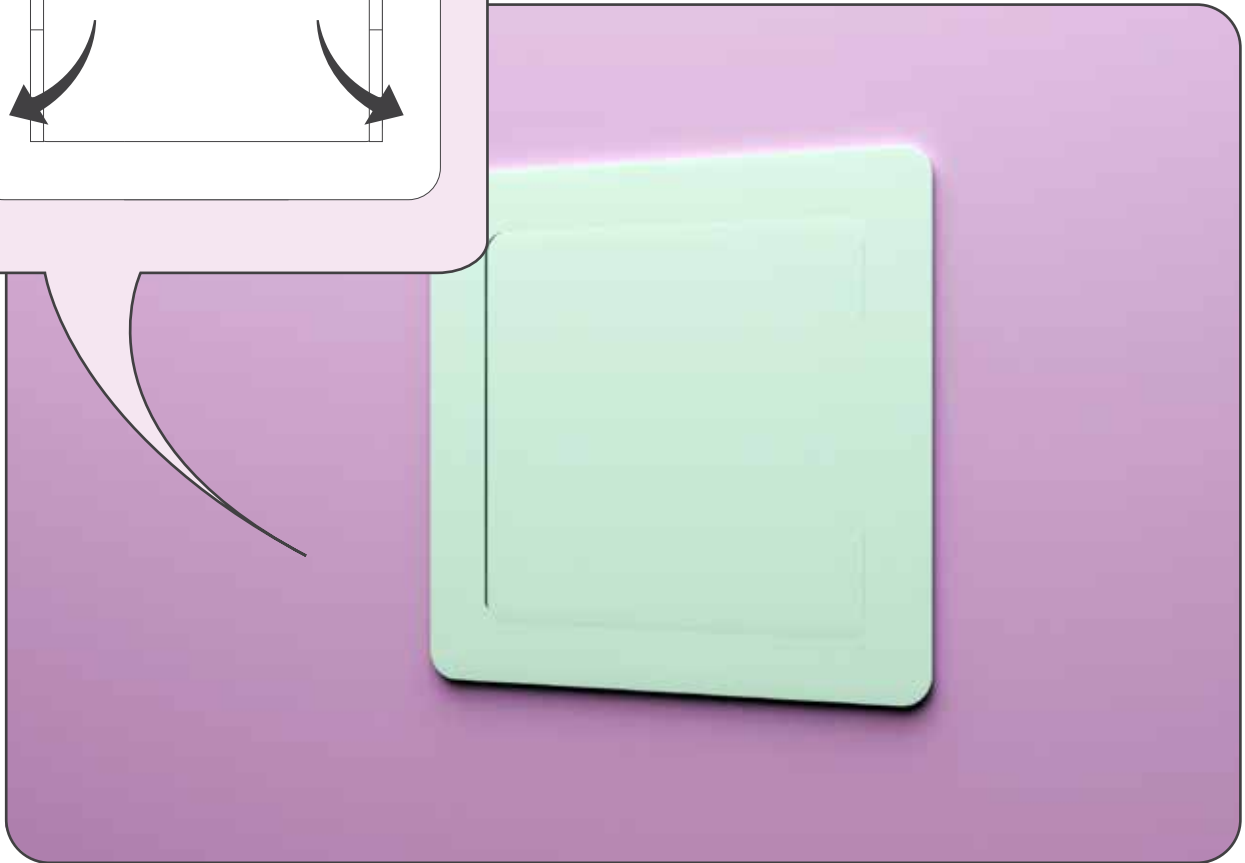

Once completely dried, the snap friction door can be released using a coin or similar.

