


PCAP Fitting Instructions

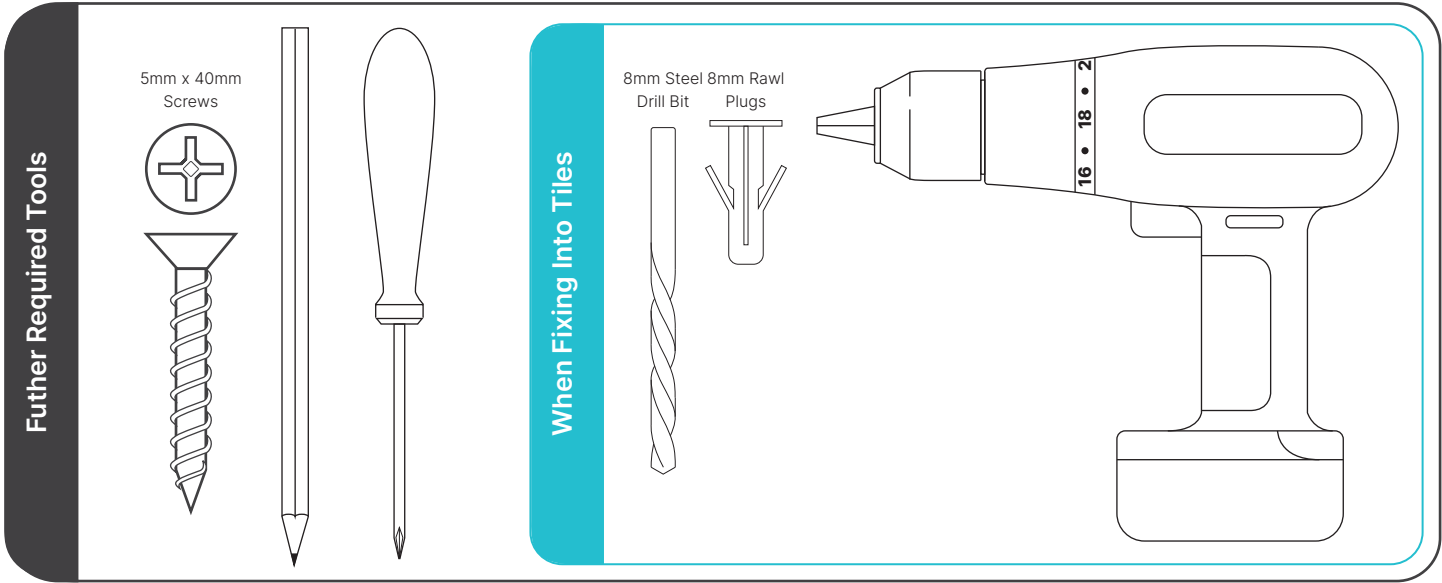


CODE	SIZE	STRUCTURAL OPENING	OVERALL SIZE (INC. FRAME)	CLEAR OPENING	DEPTH	WEIGHT
PCAP102	ø 102mm	ø 115mm	ø 162mm	ø 102mm	10mm	0.1kg
PCAP127	ø 127mm	ø 140mm	ø 187mm	ø 127mm	10mm	0.2kg
PCAP152	ø 152mm	ø 166mm	ø 212mm	ø 152mm	10mm	0.2kg
PCAP200	ø 200mm*	ø 213mm	ø 260mm	ø 200mm	10mm	0.4kg


*ø 200mm version has visible fixing point. All other sizes are concealed.

Form the suitable structural opening required for your product. **1**

EXAMPLE:
A **PCAP102** access panel will require a hole cutting (structural opening) of **ø115mm**.

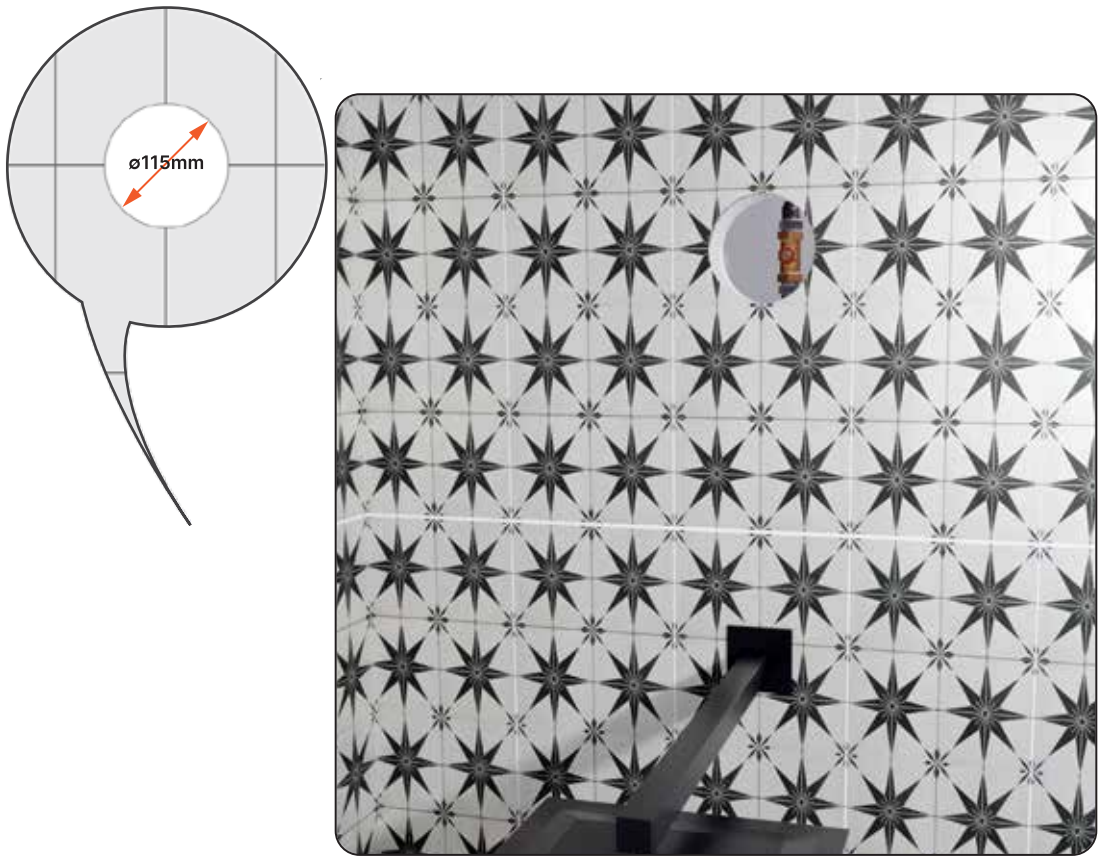


2

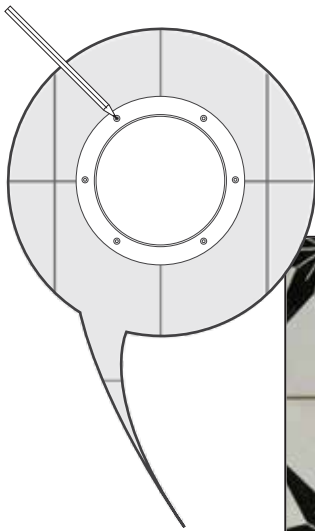

Place the access panel into the hole and mark the screw holes with a marker.



3

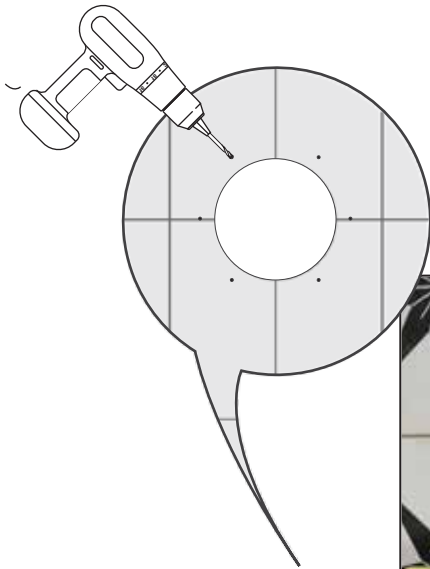


Using an 8mm drill bit, drill the marked holes and insert the rawl plugs.



4

Insert the 40mm screws into the pre-molded holes and secure them into the structure.

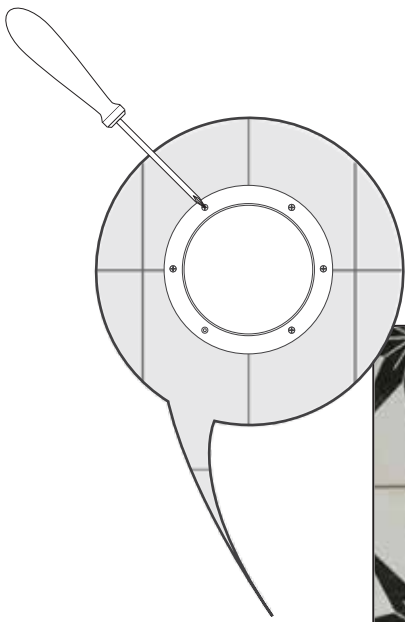

5

Attach the threaded faceplate to the base of the access panel by screwing it on clockwise.

