

BFS-PLAST-TL

1




Prepare an opening in the Wall or Ceiling, using a timber or metal frame behind the plasterboard.

2



We recommend removing the door to plaster it separately from the frame. Unscrew the hinges from the outer frame.

3

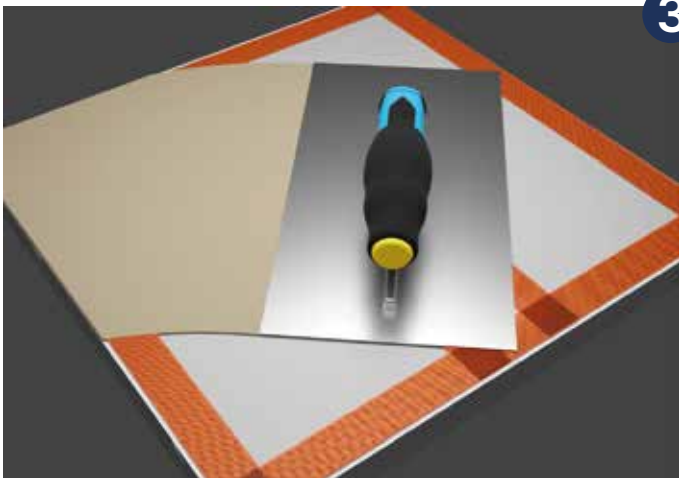

Fully cover the beaded frame with scrim tape to protect the finishing plaster from cracking.

Please adhere to the manufacturer's instructions when plastering the door.

4



Insert the frame into the opening.

Ensure there is an equal gap around all sides of the frame, then fix the frame using 40mm steel drywall screws using all the pre-punched holes on all four sides of the frame.


5



Scrim tape over the outer beading frame.

Complete the plastering finish, again adhering to the manufacturers' instructions when plastering the frame into the wall.

6

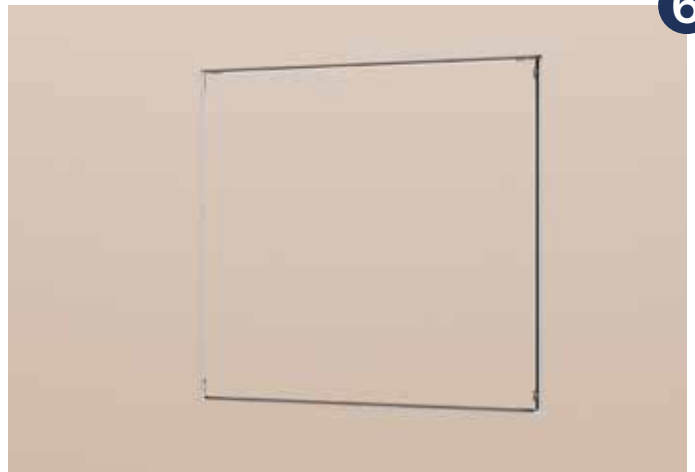

Once the plaster finish has set, reinsert the door into the frame by following the process on section 2 (in reverse).

Looking for more detailed instructions?



Visit the link below or scan the QR Code
www.accesspanelinstallation.co.uk

