
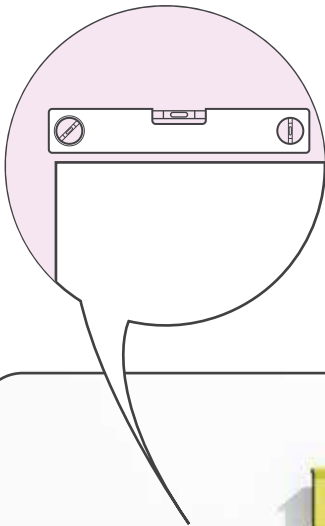
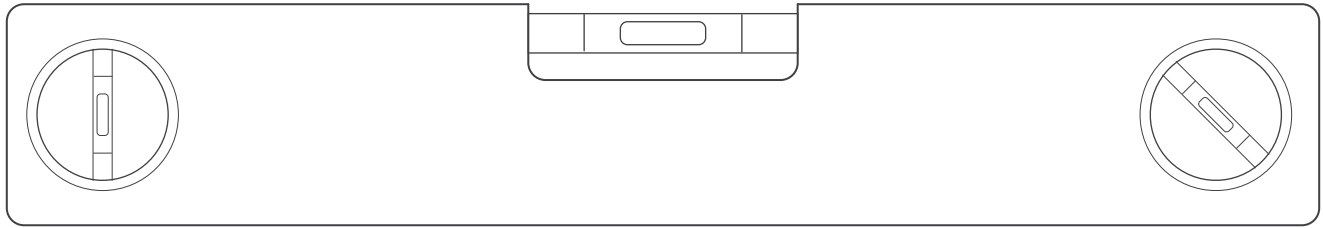



TILE LIFT-OUT

Fitting
Instructions

40mm Steel
Drywall
Screws




Ensure your structural opening is formed level, plumb, and square and 9mm larger than the internal frame size.

1




2

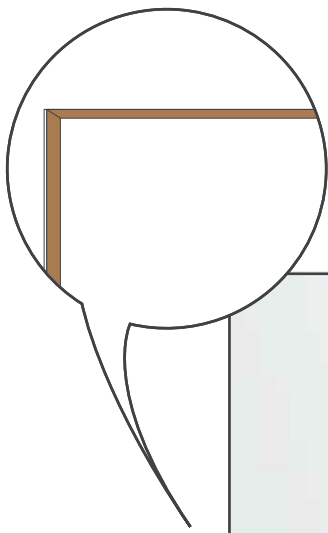

Support the opening by adding a timber batton around the opening if required.




3

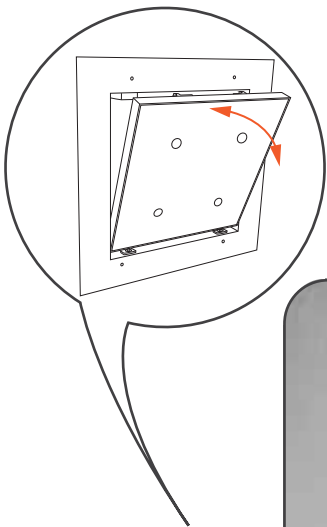


Push the top of the door inwards to release the spring catches.

Remove the door to be tiled separately.

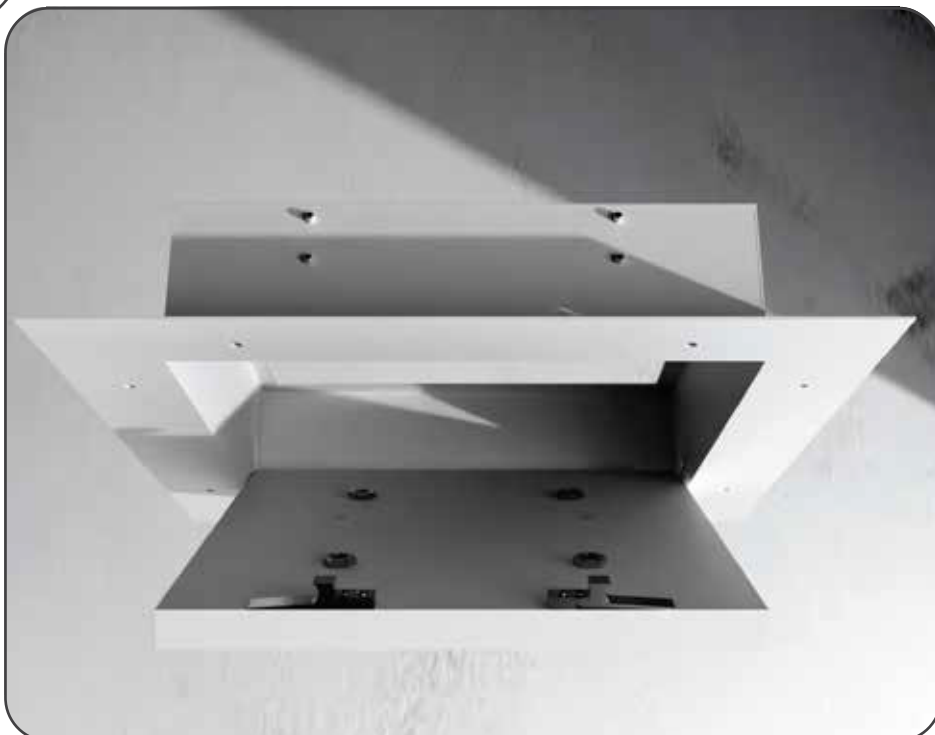

3

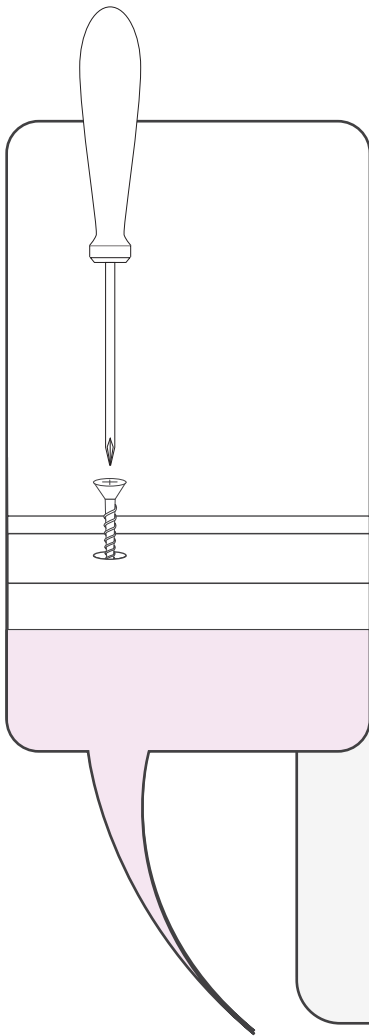

Fix the frame using 40mm steel drywall screws using all the pre-punched holes of the frame.



4


Apply tile adhesive to the door following the guidelines provided by the manufacturer's instructions.

Tile the door. When dry, engage it back into the frame.

Max thickness incl. tile & adhesive: 12 mm



4

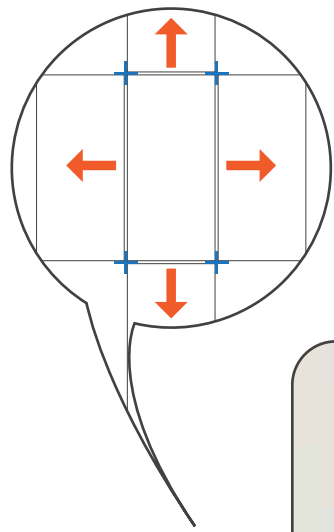


Apply tile adhesive to the surrounding wall, again following the guidelines provided by the adhesive manufacturer's instructions.

Tile outwards from the access panel, **covering** the frame.



5

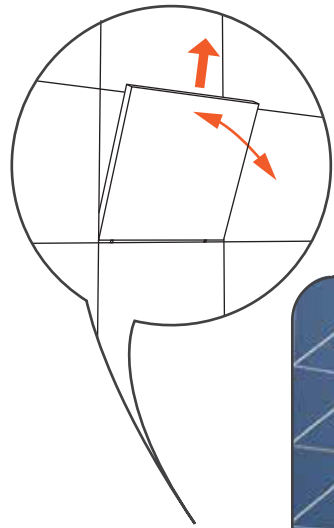

To open the access panel push the tile door in to release.

