
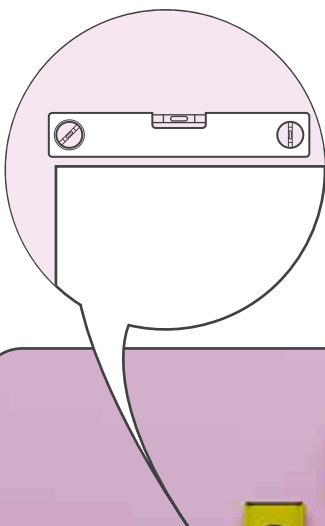
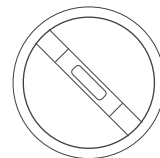
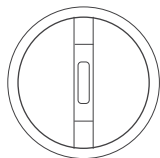



WP-TL Fitting Instructions

40mm Steel
Drywall
Screws



Ensure your structural opening is formed level, plumb, and square and 5mm larger than the internal frame size.

1



2


Press the door inwards to open, releasing the sprung catches. Then, insert the access panel frame into the opening.



3

Fix the frame using 40mm steel drywall screws using all the pre-punched holes of the frame (do not over tighten).

Ensure there is an equal gap on all sides of the frame to guarantee it is installed squarely within the structural opening.

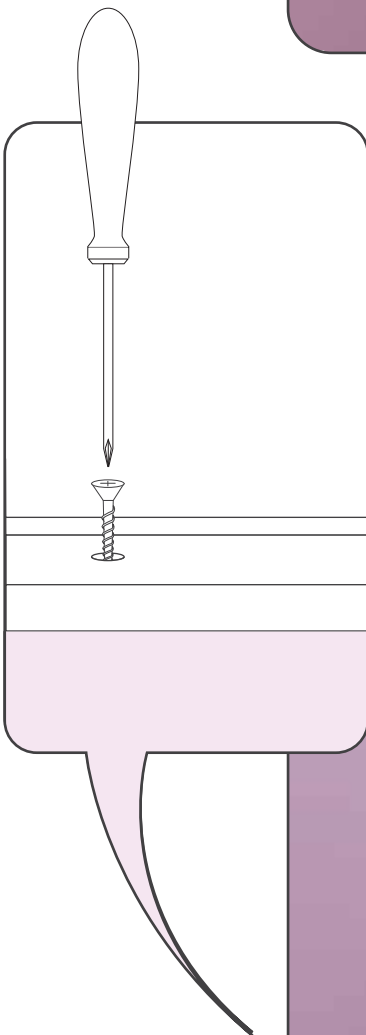

After securing the access panel in place, proceed to the wallpapering stages by following the wallpaper manufacturer's instructions.

