



ELECTRICITY OVERBOX

Fitting
Instructions

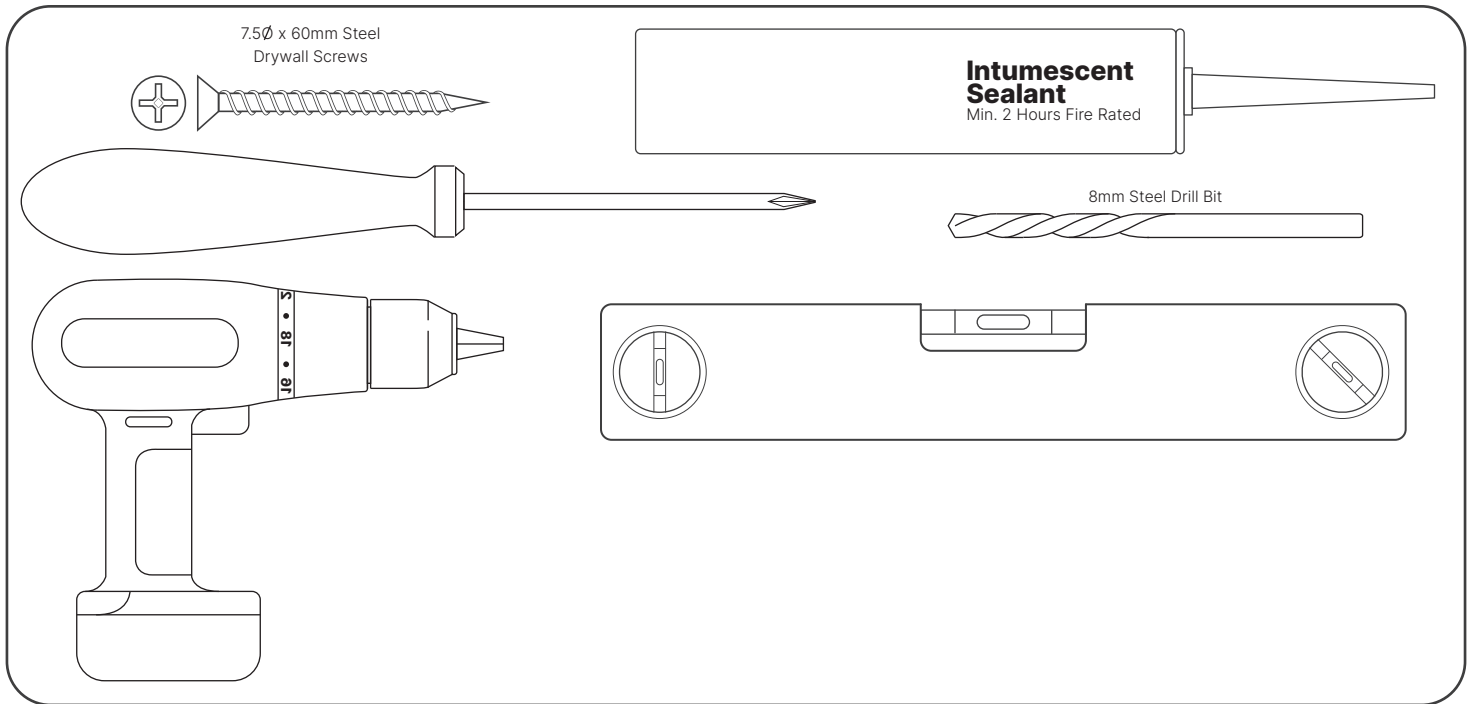


1

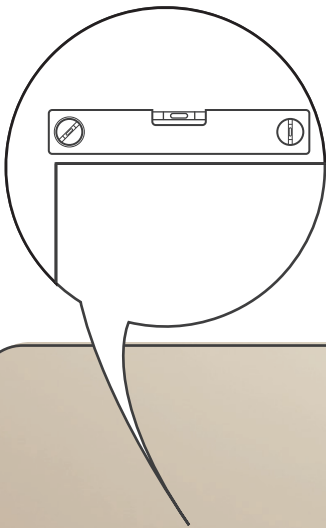

Before fitting the electricity overbox, ensure the meter opening is square and clean.



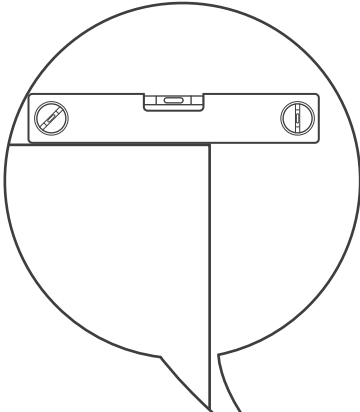

Hold and support the door, then disengage the sprung hinge pin by pushing in the opposite direction from the closest frame, and remove the door.


Place the outer frame over the meter into the desired position, level and mark the fixing holes.





When drilling into walls, always drill holes at a safe distance from any potential electrical cables.


3

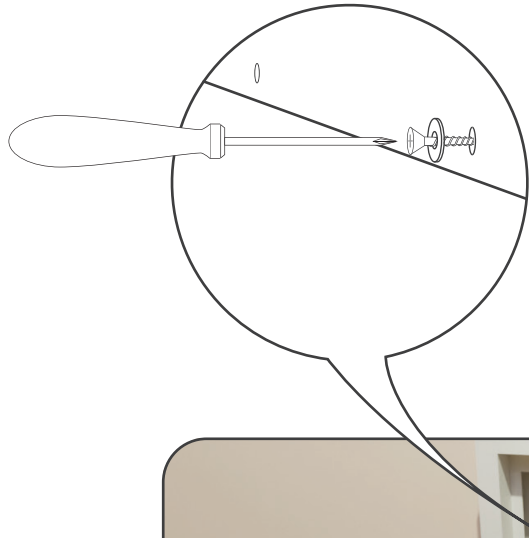

Fix the frame using 60mm steel drywall screws, washers and appropriate Rawlplugs, using all the pre-punched holes on all four sides of the frame.



Apply a 10mm wide bead of intumescent sealant (2 Hours Minimum Fire Rated) around all four edges where the inner frame connects to the wall.

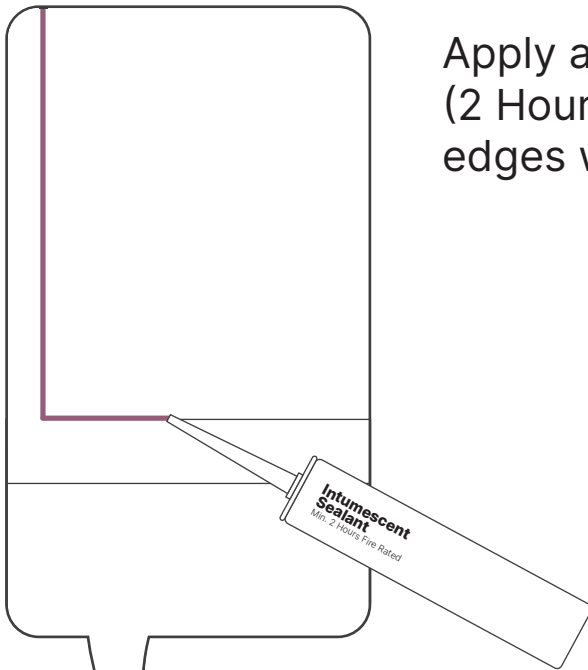

Refit the door by re-engaging the sprung hinge pins into the holes.

Job completed.

