
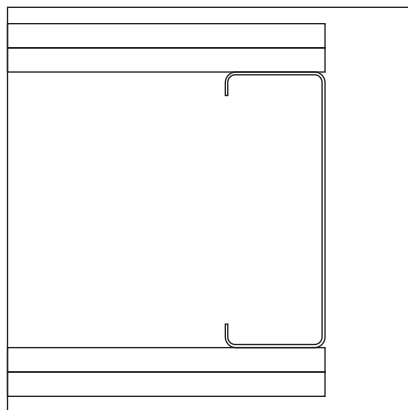


Fitting Instructions

Door Type: Double


Lock Type: Budget Lock

Structure Type: Steel Stud & Track Structure

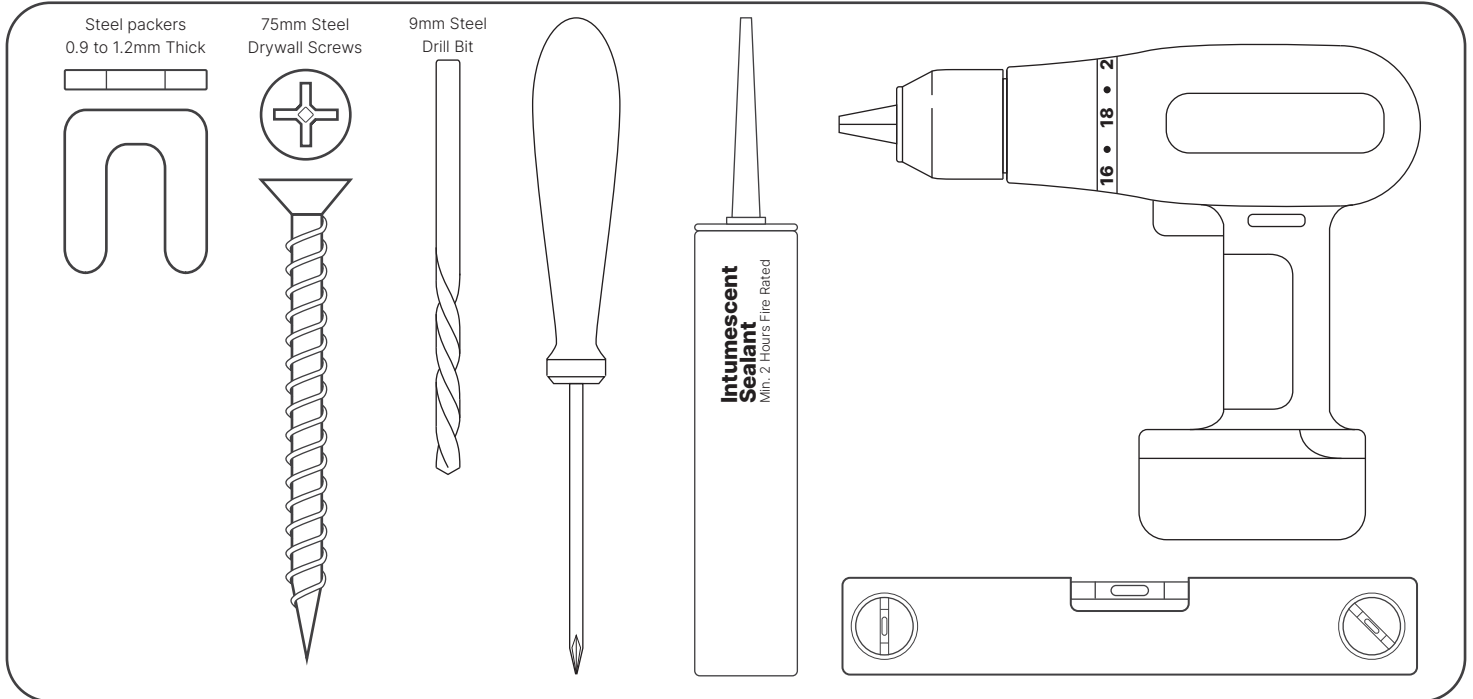


The aperture's stud and track metal support must be 35mm larger than the ordered panel size, and formed level, plumb, and square.

1

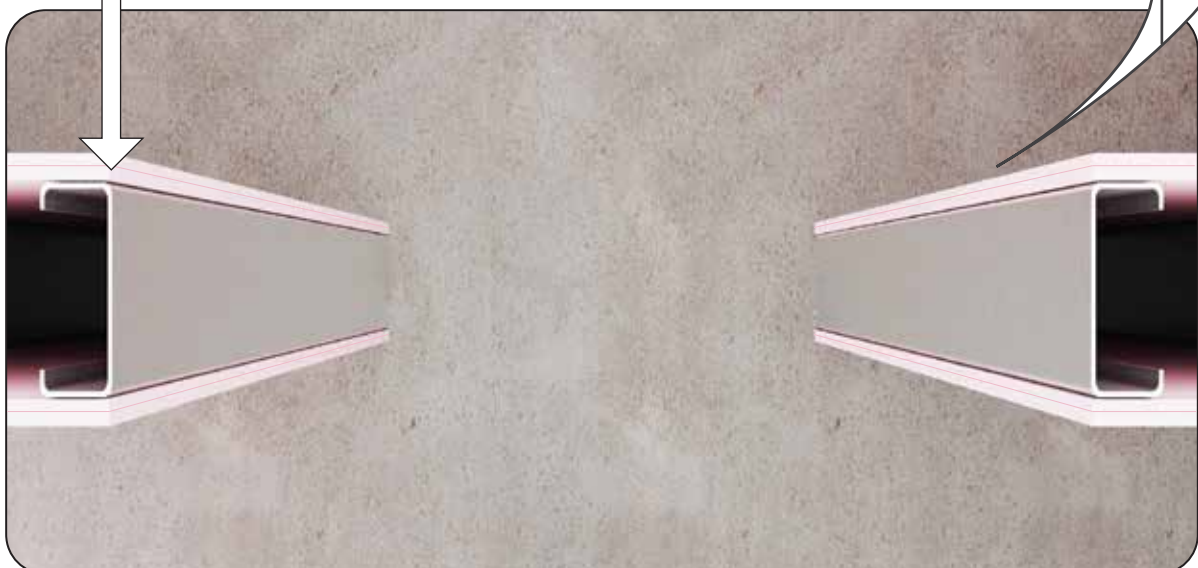

2

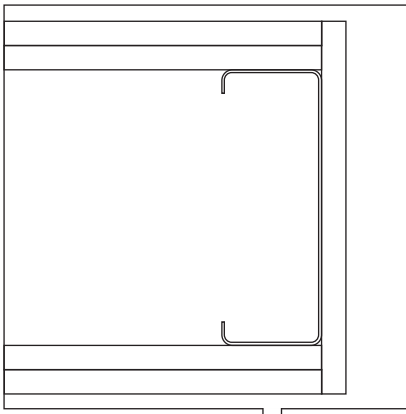


Fully line the new aperture opening with a single layer of 12.5mm Fireline plasterboard on all four sides.

Ensure the finished structural opening is 10mm larger than the internal frame size (ordering size).

Example:


1800mm x 600mm access panel requires structural opening
1810mm x 610mm (after the single 12.5mm plasterboard lining has been fitted)

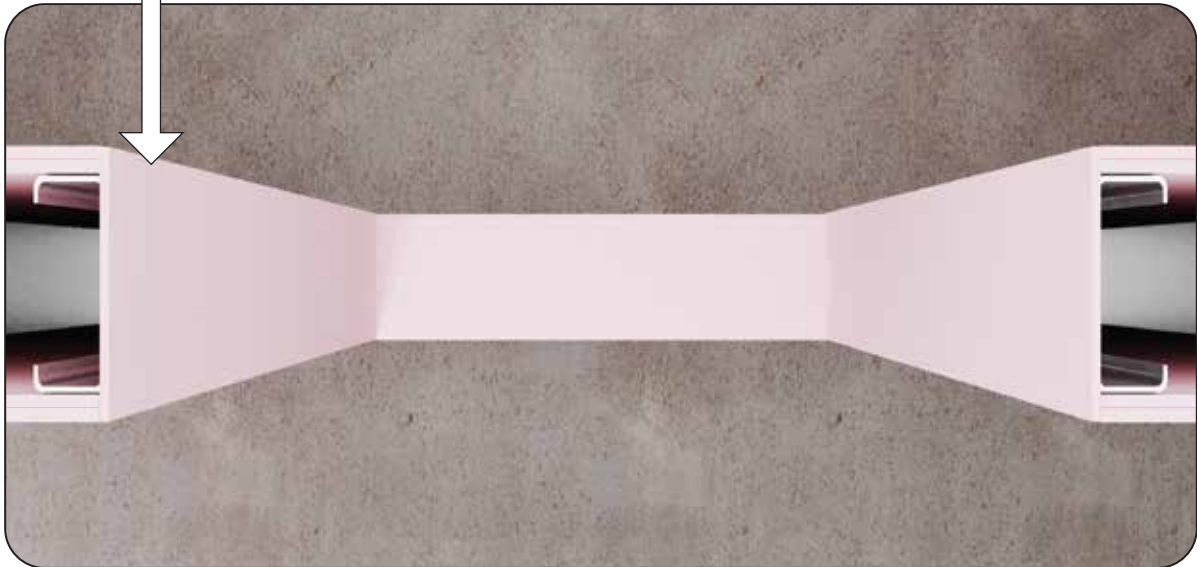

3



When installing larger riser doors, we advise removing the door from the frame before fitting the product.

This is achieved by disengaging the sprung hinge pins by pushing in the opposite direction from the closest frame.

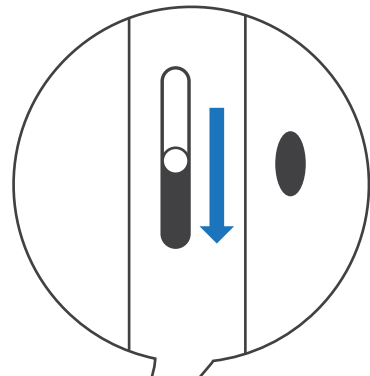


Ensure the frame is plumb and square and Insert it into the structural opening.


4

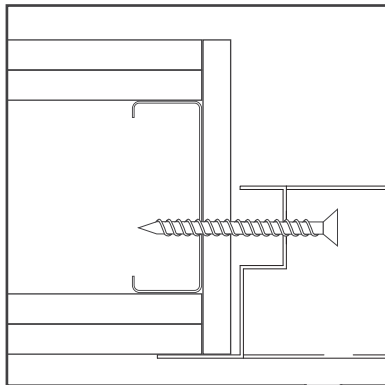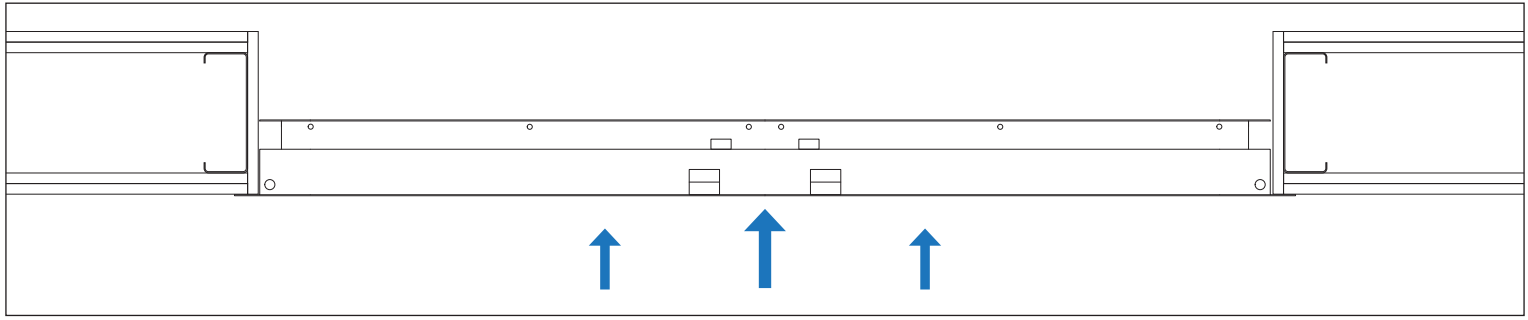


Fix the frame using 75mm steel drywall screws using all the pre-punched holes on all four sides of the frame.
(do not fully tighten)

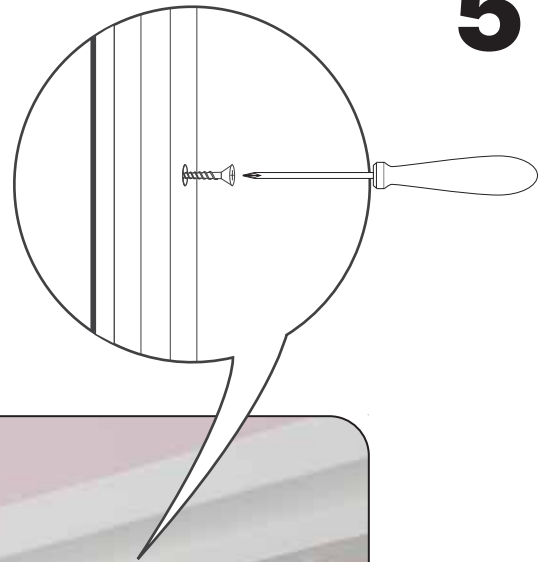



5

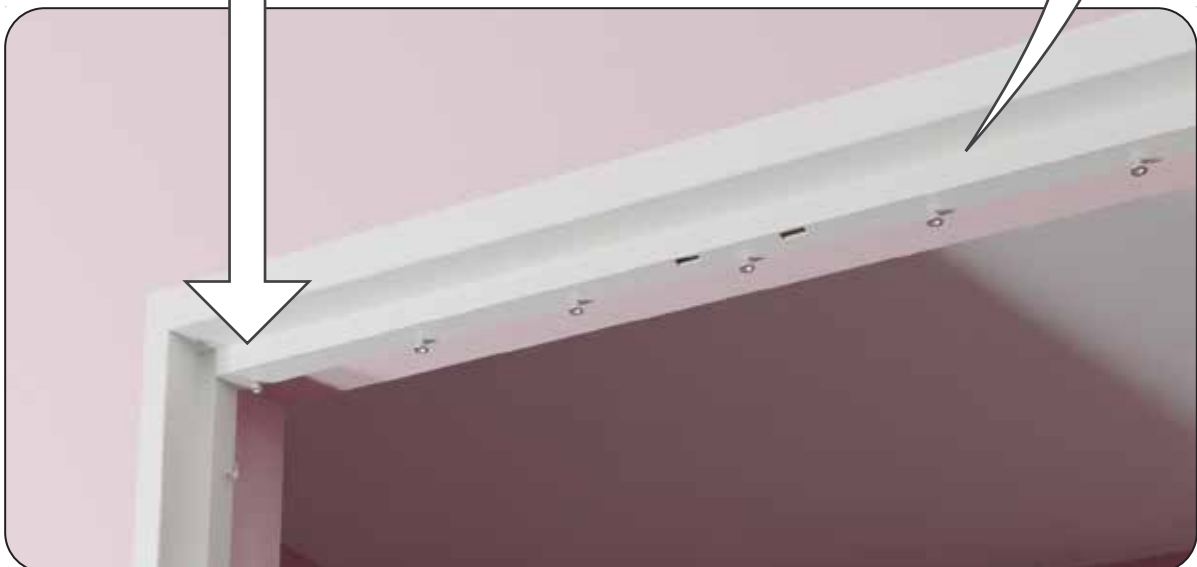


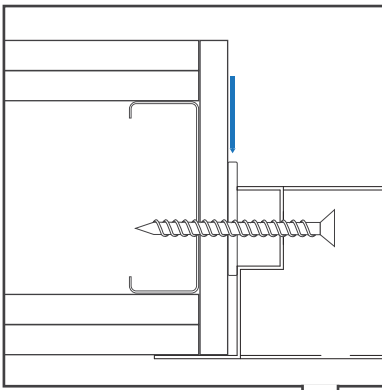
6

Ensure there is an equal gap around all sides of the frame, using steel packers where required up to a maximum of 5mm each side.


We recommend using a minimum of 2 packers on both the left and right sides.

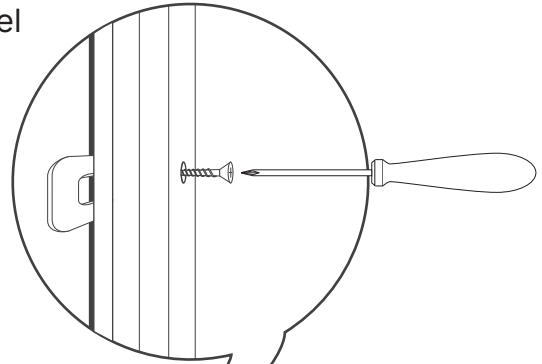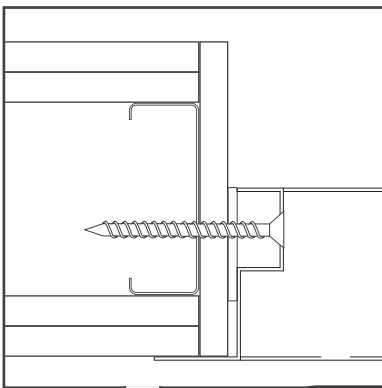**7**

Fully tighten the screws ensuring the frame remains square and all the fixings are substantial.

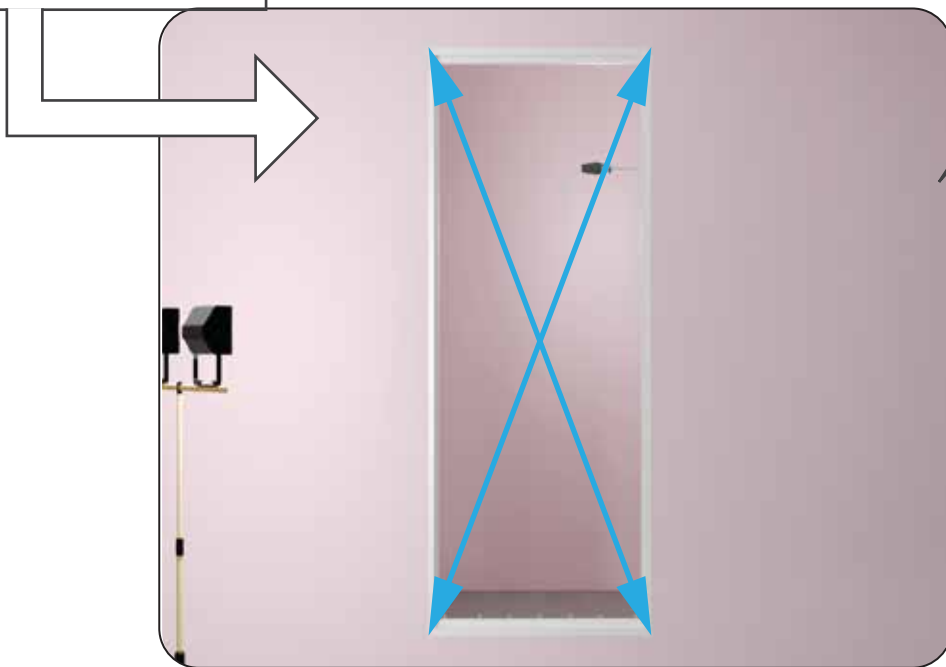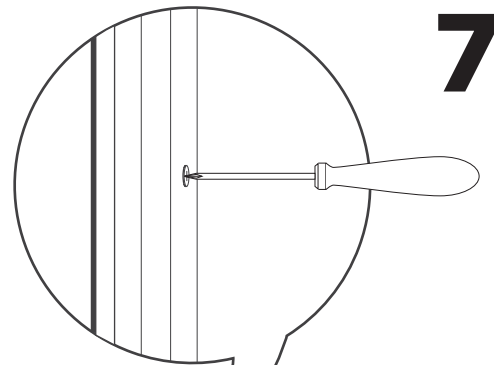


8

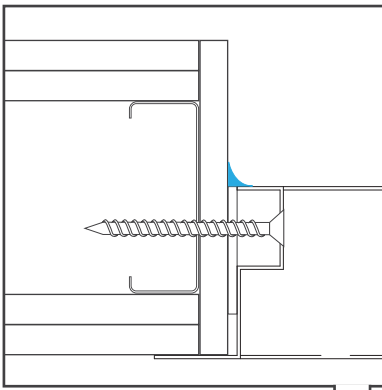


To the rear of the Door Frame.

Apply a 5mm wide bead of intumescent sealant (2 Hours Minimum Fire Rated) around all four edges where the frame connects to the wall.


Ensure the gap is continuously bridged with the sealant.

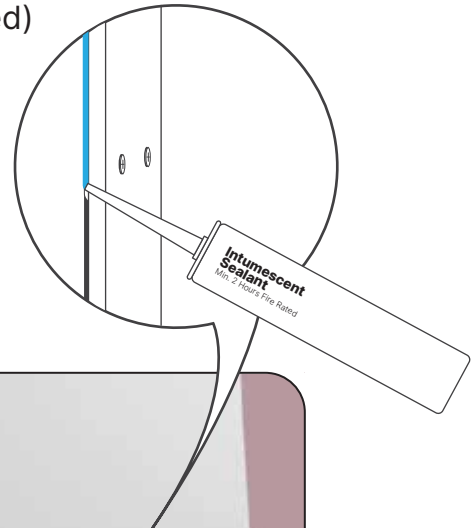

9

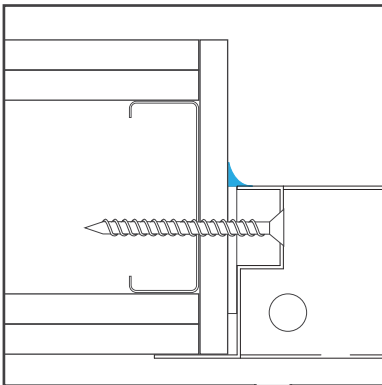

Using a 9mm drill bit, re-drill the pre-punched holes for the hinge pin, clearing them of the plasterboard lining.

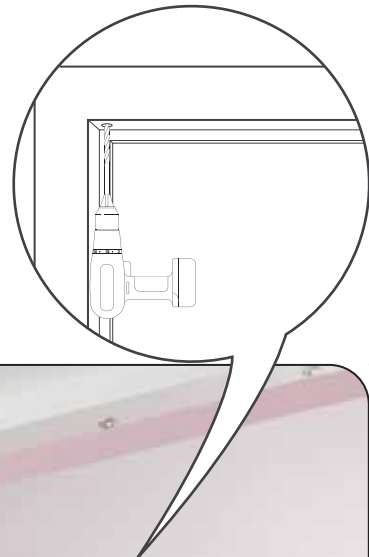


Re-hang the doors once the frame is fixed and secure.

Locate the door's bottom spring pin into the pre-punched hinge hole.

Rotate the upper edge of the door towards the frame, and detract the top spring pin to allow the door to fit inside the frame.

Locate the door's top spring pin into the pre-punched hinge hole.

Ensure the gap is equal to the top and bottom.

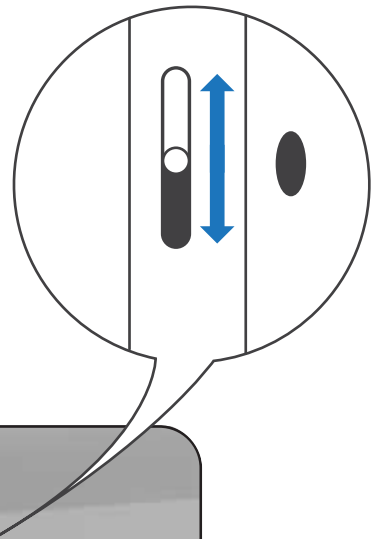

NOTE:

Adjusting the door's alignment can be achieved by tightening or loosening the screws that secure the frame to the stud and track structure.