



The aperture's stud and track metal support must be 35mm larger than the ordered panel size, and formed level, plumb, and square.



Fully line the new aperture opening with a single layer of 12.5mm Fireline plasterboard on all four sides.

Ensure the finished structural opening is 10mm larger than the internal frame size (ordering size).



Insert the frame into the opening.



Fix the frame using 75mm steel drywall screws using all the pre-punched holes on all four sides of the frame (do not fully tighten).

Ensure there is an equal gap around all sides of the frame, using steel packers where required up to a maximum of 5mm each side. Fully tighten the screws when square.



It is essential to use Scrim Tape to overlap the Panel frame and Plasterboard. Without this, cracking of the plaster will occur.




To the rear of the Door Frame.

Apply a 5mm wide bead of intumescent sealant (2 Hours Minimum Fire Rated) around all four edges where the frame connects to the wall.



To install larger access panels, first remove the door from the frame. Unbolt the door and lift it off the hinge studs. Once the frame is securely in place, re-hang the door. Make sure the gaps at the top and bottom are equal before re-bolting it.

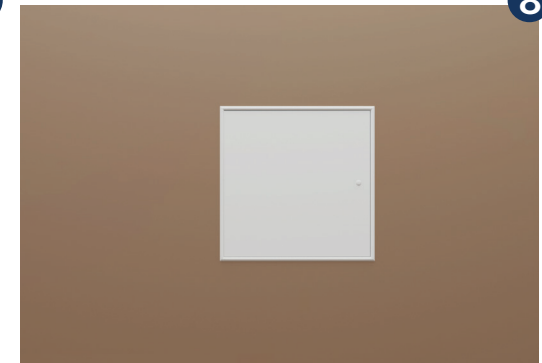

Project complete.

## Looking for more detailed instructions?



Visit the link below or scan the QR Code  
[www.accesspanelinstallation.co.uk](http://www.accesspanelinstallation.co.uk)

