





CONTEMPORARY PD LOFT HATCH

PROVIDED

30mm Steel
Screws





Futher Required Tools

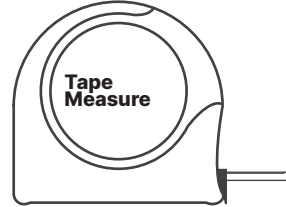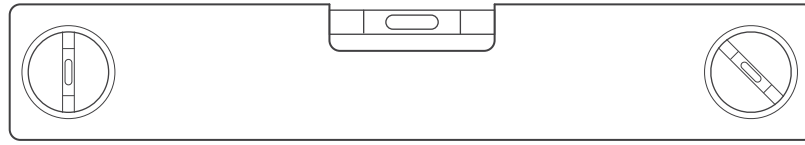


1

Form a suitable opening in the ceiling and between the joists, with minimum dimensions of 560 x 760mm

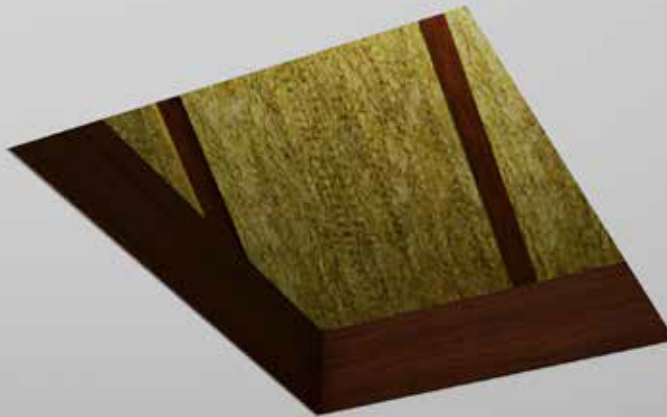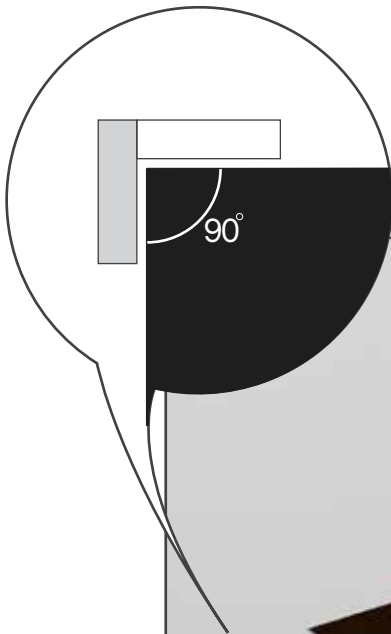

2

Open the hatch 90° and locate the frame into the prepared structural opening.

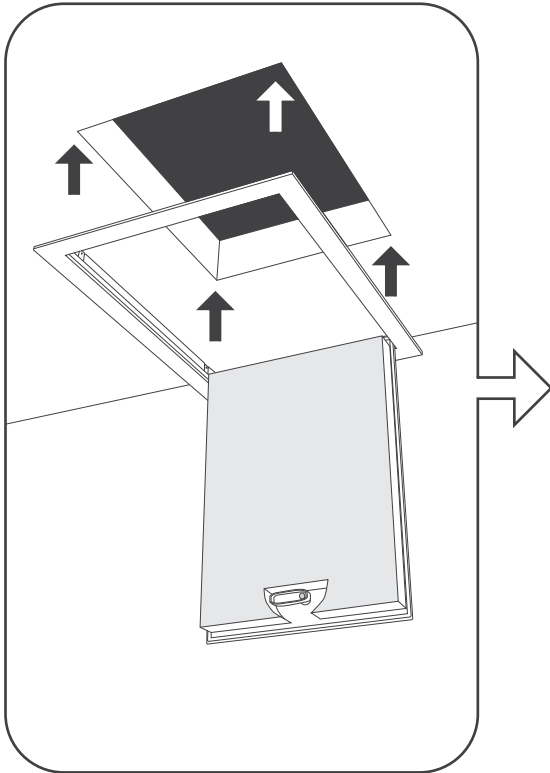**3**

Push the frame tightly against the ceiling to engage the seals between the frame and the ceiling.

